




Before you attempt to prep, grind or paint this part, please clean the part with hot soapy water and a chemical cleaning removal agent. We recommend a product made by "One Choice" SU4901 or SU902. This step needs to be completed or you are grinding the molding agent directly into the part.

Pissed Off Headlight Bezel Installation Instructions

1. Insert bottom of bezel and tilt back as shown in picture A
2. If the bezel makes contact with the lights before it fits flush on top, trim the marked areas until the bezel fits flush on top of the fairing as shown in picture B & C
3. Once the bezel is fitting flush, drill holes with a small bit and insert screws as shown in picture D & E
4. Installation complete as shown in picture F

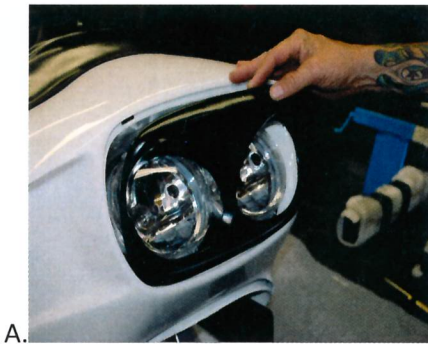

A.



B.



C.



D.



E.



F.

Note: The earlier assemblies have a black plastic cover around the headlights. On the correct or later assemblies, you can see small screws on the sides of the lens from the front. If you can't see those screws from the front you have the 08 and earlier assembly and you need to update as stated on the website.